

Mobile Phone listed below were tested to conform SE 888 charging compatibility.

Brand	Model	Device claimed can be charged through USB & Micro USB of SE 888	Note
AMOI	A50	Y	
Apple	iPhone 2G	Y	
Apple	iPhone 3G	Y	
Apple	iPhone 3GS	Y	OS version: Version 3.1=> X, will not work on this version, please upgrade your mobile phone version in order to utilize this feature version 3.1.3 => Y version 4.3 => Y
Apple	iPhone4	Y	
AT&T	AT&T Quickfire	X	Not standard USB, special charger port
BlackBerry	8700g	Y	
BlackBerry	8100	Y	
BlackBerry	8300 (GSM)Curve	Y	
BlackBerry	8800 (GSM)	Y	
BlackBerry	7130g (GSM)	Y	
BlackBerry	7100g (GSM)	Y	
BlackBerry	7290 (GSM)	Y	
BlackBerry	8320 Curve	Y	
BlackBerry	8330 Curve (CDMA)	Y	
BlackBerry	8130 Pearl (CDMA)	Y	
BlackBerry	9000Bold	Y	
BlackBerry	9500 Storm	Y	
BlackBerry	8120	Y	
BlackBerry	8310	Y	
BlackBerry	8110Pearl	Y	
BlackBerry	8220Pearl Flip	Y	
Blackberry	8820	Y	
BlackBerry	8830	Y	
BlackBerry	8900	Y	
BlackBerry	8520	Y	
BlackBerry	9630	Y	
BlackBerry	9700	Y	
BlackBerry	9550 (Storm 2) (GSM)	Y	
BlackBerry	9530	Y	
BlackBerry	9800	Y	
BlackBerry	8530	Y	
BlackBerry	9330	Y	

Dopod	586W	Y	
Dopod	818	Y	
Eten	X500	Y	
Google	G1	Y	
HP	iPAQ rw6828	Y	
HP	iPAQ 512	Y	
HP	iPAQ 912c	Y	
HTC	TyTNII	Y	
HTC	Touch	Y	
HTC	P3300	Y	
HTC	Touch Diamond	Y	
HTC	Touch Cruise	Y	
HTC	P3600 trinity	Y	
HTC	XV6800 (Mogul) (CDM	Y	
HTC	Touch HD T8282	Y	
HTC	Touch Pro T7272	Y	
HTC	Shadow	Y	
HTC	Magic Phone	Y	
HTC	Touch Diamond 2 T53	Y	
HTC	Touch Pro 2 (T7373)	Y	
HTC	Pure (ST6356)	Y	
HTC	Tilt 2 (ST7377)	Y	
HTC	HD mini	Y	
HTC	Whitestone (VX6975)	Y	
HTC	Tattoo	Y	
HTC	Desire	Y	
HTC	Wildfire A3333	Y	
HTC	Legend A6363	Y	
HTC	Aria 65169	Y	
HTC	Smart	Y	
HTC	Desire HD	Y	
HTC	Snap S522	Y	
LG	BL20v	Y	
LG	BL40	Y	
LG	CE110	Y	
LG	CF360	Y	
LG	Cosmos	Y	
LG	CT810	Y	
LG	CU515	Y	
LG	CU720	Y	
LG	CU920	Y	
LG	GB250	Y	
LG	GB255	Y	
LG	GC900	Y	

LG	GD310 (Ice Cream 2)	Y	
LG	GD330	Y	
LG	GD510 Pop	Y	
LG	GD580 Lollipop	Y	
LG	GD710	Y	
LG	GD880 mini	Y	
LG	GD900	Y	
LG	GM360i	Y	
LG	GM750	Y	
LG	GR500	Y	
LG	GS500v	Y	
LG	GT365	Y	
LG	GT505	Y	
LG	GT540	Y	
LG	GU230	Y	
LG	GU285	Y	
LG	GW520	Y	
LG	GW620	Y	
LG	GW820	Y	
LG	GX200	Y	
LG	GX500	Y	
LG	HB620T	Y	
LG	KC 910	Y	
LG	KE500	Y	
LG	KE820	Y	need to use official USB cable of the mobile phone
LG	KE850	Y	need to use official USB cable of the mobile phone
LG	KE970 (KU970) (Shine)	Y	need to use official USB cable of the mobile phone
LG	KF300	Y	
LG	KF301	Y	
LG	KF310	Y	
LG	KG300	Y	
LG	KG800	Y	need to use official USB cable of the mobile phone
LG	KG810	Y	need to use official USB cable of the mobile phone
LG	KG90c	Y	need to use official USB cable of the mobile phone
LG	KM900	Y	
LG	KP275	Y	
LG	KP500	Y	
LG	KP502	Y	
LG	KS20	Y	
LG	KS360	Y	
LG	KS500	Y	
LG	KU380	Y	
LG	KU800	Y	need to use official USB cable of the mobile phone
LG	KU970 (KE970) (Shine)	Y	

LG	KU990Viewty	Y	need to use official USB cable of the mobile phone
LG	LN510 (Rumor Touch)	Y	
LG	Lotus (LG600) (CDMA)	Y	
LG	LX150 (CDMA)	Y	need to use official USB cable of the mobile phone
LG	LX160 (CDMA)	Y	need to use official USB cable of the mobile phone
LG	LX265 (CDMA)	Y	
LG	LX290 (CDMA)	Y	
LG	LX370 (CDMA)	Y	
LG	LX570 MUZIQ (CDMA)	Y	need to use official USB cable of the mobile phone
LG	LX610 (CDMA)	Y	
LG	P500	Y	
LG	Rumor (CDMA)	Y	need to use official USB cable of the mobile phone
LG	T300	Y	
LG	T325	Y	
LG	TU915 (CU915)	Y	
LG	UX220 (CDMA)	Y	
LG	UX310 (CDMA)	Y	
LG	UX700 (CDMA)	Y	
LG	UX840 (CDMA)	Y	
LG	VS740 (Ally)	Y	
LG	VX1000Voyager (CDMA)	Y	
LG	VX11000 (CDMA)	Y	
LG	VX5300 (CDMA)	X	Not standard USB, special charger port
LG	VX5600 (CDMA)	Y	
LG	VX7100 (CDMA)	Y	
LG	VX8550 (CDMA)	Y	
LG	VX8560 (CDMA)	Y	
LG	VX8560B (Chocolate 3)	Y	
LG	VX8575 (CDMA)	Y	
LG	VX8800 (CDMA)	Y	
LG	VX9100 (CDMA)	Y	
LG	VX9200 (evn3)(CDMA)	Y	
LG	VX9600 (CDMA)	Y	
LG	VX9700 (CDMA)	Y	
Moto	A1200	Y	
Moto	A732	Y	
Moto	Droid (Milestone)	Y	
Moto	E2 ( ROKR E2)	Y	
Moto	E6 (ROKR E6)	X(Mobile power on automatically)	mini USB
Moto	E680	X	mini USB
Moto	E680i	X	mini USB
Moto	E770	X	mini USB
Moto	E8	Y	

Moto	EM30 (ROKR EM30)	Y	
Moto	EM325 (ROKR EM325)	Y	
Moto	EM330 (ROKR EM330)	Y	
Moto	EM35	Y	
Moto	EX128	Y	
Moto	EX300	Y	
Moto	I335	X	mini USB
Moto	K1(KRZR K1)	X(Mobile power on automatically)	It flashes on mobile screen, but cannot be charged (mini USB)
Moto	K1m (CDMA)	X	mini USB
Moto	K3 (KRZR K3)	X	mini USB
Moto	L6	X	mini USB
Moto	L7 ( SLVR )	X(Mobile power on automatically)	Mobile power on automatically, but cannot be charged (mini USB)
Moto	L72 ( SLVR L72)	X(Mobile power on automatically)	Mobile power on automatically, but cannot be charged (mini USB)
Moto	L800t	Y	
Moto	MB501 (Quench)	Y	
Moto	MB511 (Flipout)	Y	
Moto	ME600 (Backflip)	Y	
Moto	Q11	Y	
Moto	Q9	X	Micro USB
Moto	QA1	X	Micro USB
Moto	Sidekick Slide	Y	
Moto	U6 ( PEBL )	X	mini USB
Moto	U9	Y	
Moto	V1100 ( RAZR V1100)	Y	
Moto	V3	X	mini USB
Moto	V3 (USA )	X	mini USB
Moto	V360	Y	use USB to mini USB cable
Moto	V361	Y	use USB to mini USB cable
Moto	V365	X	mini USB
Moto	V3c (CDMA)	X	mini USB
Moto	V3m (CDMA)	X	mini USB
Moto	V3x ( RAZR V3x )	X	mini USB
Moto	V3xx	X(Mobile power on automatically)	it will show "unauthorized charger" on screen (mini USB)
Moto	V6(RAZR maxx V6)	X(Mobile power on automatically)	it will show "unauthorized charger" on screen (mini USB)
Moto	V620	X	need to use official USB cable of the mobile phone
Moto	V750 (CDMA)	X	Micro USB
Moto	V8 (RAZR V8)	Y	
Moto	V9	X	Micro USB
Moto	V950 (CDM)	Y	
Moto	V9m	X	Micro USB

Moto	V9x	X	Micro USB
Moto	VA76r	Y	need to use official USB cable of the mobile phone
Moto	VE538	Y	need to use official USB cable of the mobile phone
Moto	VE66	Y	
Moto	W385 (CDMA)	X	mini USB
Moto	W510	Y	it will show "unauthorized charger" on screen (mini USB)
Moto	W7	Y	
Moto	W755 (CDMA)	X	mini USB
Moto	WX390	Y	
Moto	WX395	Y	
Moto	XT502 (Quench XT3)	Y	
Moto	XT701	Y	
Moto	XT720	Y	
Moto	Z3(RIZR Z3)	X(Mobile power on automatically)	it will show "unauthorized charger" on screen (mini USB)
Moto	Z6	Y	need to use official USB cable of the mobile phone
Moto	Z6TV (CDMA)	X	mini USB
Moto	Z8 ( RIZR Z8)	Y	mini USB
Moto	Z9N	X	micro USB
Moto	ZN200	Y	
Moto	ZN300	Y	
Moto	ZN5	Y	
Nokia	6350	Y	
Nokia	6730	Y	
Nokia	8600	Y	
Nokia	5630 XpressMusic	Y	
Nokia	5800 XpressMusic	X	USB is for data transfer mode (micro USB)
Nokia	6205 (CDMA)	Y	
Nokia	6600 f	Y	
Nokia	6600 S	Y	
Nokia	6700C	Y	
Nokia	C3-00	X	Barrel type charger
Nokia	C3-01	Y	
Nokia	C5-00	X	Barrel type charger
Nokia	C6-01	Y	
Nokia	C7-00	Y	
Nokia	E75	Y	
Nokia	N8	Y	
Nokia	N86	Y	
Nokia	N97	Y	
Nokia	N97 mini	Y	
Nokia	X2-00	Y	
Nokia	X3	Y	

O2	Xda Atom	Y	
O2	XDA Iq	Y	
O2	Xda Stealth	Y	
Palm	Pixi	Y	
Palm	Pixi Plus	Y	
Palm	Pre	Y	
Palm	Pre Plus	Y	
Palm	Treo Pro	Y	
Pantech	Impact	X	Not standard USB, special charger port
Pantech	Jest	Y	The cable is not official but can be charged up (micro USB)
Pantech	Link	Y	
Rim	8700c	Y	
Sagem	my 501X	Y	
Samsung	A237	Y	
Samsung	A437	Y	
Samsung	A513 Helio (CDMA)	Y	
Samsung	A707	Y	
Samsung	A717	Y	
Samsung	A727	Y	
Samsung	A737	Y	
Samsung	A747	Y	
Samsung	A767	Y	
Samsung	A797 (Flight)	Y	
Samsung	A827	Y	
Samsung	A837	Y	
Samsung	A847 (Rugby II)	Y	
Samsung	A867	Y	
Samsung	A877	Y	
Samsung	A887	Y	
Samsung	A897	Y	
Samsung	B2100	Y	
Samsung	B7300	Y	
Samsung	C3050C	Y	
Samsung	C3110	Y	
Samsung	C5130	Y	
Samsung	C5212	Y	
Samsung	C5510	Y	
Samsung	D780	Y	
Samsung	D828E	Y	
Samsung	D880	Y	
Samsung	D900	Y	
Samsung	D900i	Y	
Samsung	D988	Y	

Samsung	E2550	Y	
Samsung	E590	Y	
Samsung	E830	Y	
Samsung	F110	Y	
Samsung	F210	Y	
Samsung	F258	Y	
Samsung	F300	X	Not standard USB, special charger port
Samsung	F480	Y	
Samsung	F490	Y	
Samsung	F500	Y	
Samsung	G800	Y	
Samsung	i200	Y	
Samsung	i325 (CDMA)	Y	
Samsung	i5700 (Galaxy Spica)	Y	
Samsung	i5801 (Galaxy 580)	Y	
Samsung	i617	Y	
Samsung	i7500 Galaxy	Y	
Samsung	i770 (CDMA)	Y	
Samsung	i8000 Omnia	Y	
Samsung	i8510 InnoV8	Y	
Samsung	i8910 HD	Y	
Samsung	i897	Y	
Samsung	i9000	Y	
Samsung	i907	Y	
Samsung	i908 Omnia	Y	
Samsung	J200	Y	
Samsung	J700	Y	
Samsung	J758	Y	
Samsung	J808	Y	
Samsung	L708 (L700)	Y	
Samsung	L760	Y	
Samsung	L770	Y	
Samsung	M310	Y	
Samsung	M540 (CDMA)	Y	
Samsung	M5650	Y	
Samsung	M630 (CDMA)	Y	
Samsung	M7600	Y	
Samsung	M800 (CDMA)	Y	
Samsung	M8910	Y	
Samsung	M910 (Intercept)	Y	
Samsung	P520 Giorgio Armani	Y	
Samsung	S3030 (Tobi)	Y	
Samsung	S3600H	Y	
Samsung	S3650 Corby	Y	



Samsung	S5230	Y	
Samsung	S5350	Y	
Samsung	S5500	Y	
Samsung	S5550 Shark	Y	
Samsung	S5560	Y	
Samsung	S5600H	Y	
Samsung	S5628 Monte	Y	
Samsung	S7070 (Diva)	Y	
Samsung	S7350	Y	
Samsung	S8000	Y	
Samsung	S8300 Ultra touch	Y	
Samsung	S8500 Wave	Y	
Samsung	T329	Y	
Samsung	T339	Y	
Samsung	T349	Y	
Samsung	T409	Y	
Samsung	T509 (USA )	Y	
Samsung	T669 (Gravity T)	Y	
Samsung	T719	X	Not standard USB, special charger port
Samsung	T729	Y	
Samsung	T749	Y	
Samsung	T919	Y	
Samsung	T929	Y	
Samsung	T959 (Vibrant)	Y	
Samsung	U360 (Gusto)	Y	
Samsung	U540 (CDMA)	X	Not standard USB, special charger port
Samsung	U640 (Convoy)	Y	
Samsung	U650 (CDMA)	Y	
Samsung	U700	Y	
Samsung	U700 (CDMA)	Y	
Samsung	U750 (CDMA)(Alias 2)	Y	
Samsung	U808	Y	
Samsung	U900	Y	
Samsung	U900 (CDMA)	Y	
Samsung	U940(CDMA)	Y	
Samsung	W319	Y	
Samsung	X830	X	Not standard USB, special charger port
Samsung	Z360	Y	
Samsung	Z400	Y	
Samsung	Z630	Y	
Samsung	Z720	Y	
SoftBank	707SC	Y	
SoftBank	707SCII	Y	
SoftBank	709SC	Y	

SoftBank	805SC	Y	
SoftBank	X01HT	Y	
SoftBank	X02HT	Y	
SonyEricsson	C510 Black	Y	*Note1
SonyEricsson	C902	Y	*Note1
SonyEricsson	D750i	Y	
SonyEricsson	F100	Y	*Note1
SonyEricsson	F305	Y	
SonyEricsson	G502	Y	*Note1
SonyEricsson	G900	X	Not standard USB, special charger port
SonyEricsson	J10(Elm)	Y	*Note1
SonyEricsson	J105i	Y	
SonyEricsson	K530c	Y	*Note1
SonyEricsson	K530i	Y	*Note1
SonyEricsson	K610i	Y	*Note1
SonyEricsson	K618i	Y	*Note1
SonyEricsson	K790a	Y	*Note1
SonyEricsson	K790c	Y	*Note1
SonyEricsson	K810i	Y	*Note1
SonyEricsson	S302	Y	
SonyEricsson	S500i	Y	*Note1
SonyEricsson	T303	Y	
SonyEricsson	T650i	Y	*Note1
SonyEricsson	U100	Y	*Note1
SonyEricsson	U1i	Y	
SonyEricsson	U5 Vivaz	Y	
SonyEricsson	W100i (Spro)	Y	
SonyEricsson	W20 (Zylo)	Y	*Note1
SonyEricsson	W205	X	Not standard USB, special charger port
SonyEricsson	W300i	X	Not standard USB, special charger port
SonyEricsson	W302	Y	
SonyEricsson	W350	Y	
SonyEricsson	W395	Y	
SonyEricsson	W508	Y	
SonyEricsson	W518a	Y	*Note1
SonyEricsson	W550c	Y	*Note1
SonyEricsson	W550i	Y	*Note1
SonyEricsson	W580i	Y	*Note1
SonyEricsson	W660i	Y	*Note1
SonyEricsson	W700i	Y	*Note1
SonyEricsson	W760	Y	*Note1
SonyEricsson	W800i	Y	
SonyEricsson	W880i	Y	*Note1
SonyEricsson	W890i	Y	*Note1

SonyEricsson	W900i	Y	*Note1
SonyEricsson	W902	X	Not standard USB, special charger port
SonyEricsson	W910i	X	Not standard USB, special charger port
SonyEricsson	W950i	X	Not standard USB, special charger port
SonyEricsson	W995	Y	*Note1
SonyEricsson	X1 (Xperia X1)	Y	need to use official USB cable of the mobile phone
SonyEricsson	X10	Y	
SonyEricsson	X10 mini	Y	
SonyEricsson	X10 mini pro	Y	
SonyEricsson	X2	Y	
SonyEricsson	X8	Y	
SonyEricsson	Z520a	Y	
SonyEricsson	Z520i	Y	
SonyEricsson	Z550a	Y	*Note1
SonyEricsson	Z550i	Y	*Note1
SonyEricsson	Z555	Y	
SonyEricsson	Z610i	Y	
SonyEricsson	Z750a	Y	*Note1
SonyEricsson	Z750i	Y	*Note1
T-mobile	Dash	Y	
T-Mobile	Sidekick LX	Y	
T-Mobile	Wing (S730)	Y	
VERIZON	SMT5800 (CDMA)	Y	
Willcom	Willcom 03 (WS020SH)	Y	

Notes :

Y - means compatible and tested with SE 888

X - means tested not compatible with SE 888

\*Note1: Only can be charged up when powered OFF. It will show USB connecting but cannot be charged up when powered ON.